

SDM630MCT 40mA

DIN Rail Energy Meter for Single and Three Phase Electrical Systems



- Measures kWh kVArh, kW, kVAr, kVA, P, F, PF, Hz, dmd, V, A, THD, etc.
- Bi-directional measurement IMP & EXP
- Two pulse outputs
- RS485 Modbus
- Din rail mounting 35mm
- 40mA CT connection
- Better than Class 1 / B accuracy

USER MANUAL V3.6

Introduction

The SDM630MCT 40mA measures and displays the characteristics of single phase two wire (1p2w), three phase three wire (3p3w) and three phase four wire (3p4w) supplies, including voltage, frequency, current, power, active and reactive energy, imported or exported. Energy is measured in terms of kWh, kVAh. Maximum demand current can be measured over preset periods of up to 60 minutes. In order to measure energy, the unit requires voltage and current inputs in addition to the supply required to power the product. The requisite current input are obtained current transformers(CT).

SDM630MCT 40mA can be configured to work with a wide range of CTs with 40mA output, giving the unit a wide range of operation. Built-in interfaces provides pulse and RS485 Modbus RTU outputs. Configuration is password protected.

This unit can be powered from a separate auxiliary (AC or DC) supply. Alternatively it can be powered from the monitored supply, where appropriate.

Unit Characteristics

The Unit can measure and display:

- Line voltage and THD% (total harmonic distortion) of all phases
- Line Frequency
- Currents, Current demands and current THD% of all phases
- Power, maximum power demand and power factor
- Active energy imported and exported
- Reactive energy imported and exported

The unit has password-protected set-up screens for:

- Changing password
- Supply system selection 1p2w, 3p3w, 3p4w
- Demand Interval time
- Reset for demand measurements
- Pulse output duration

Two pulse output indicates real-time energy measurement. An RS485 output allows remote monitoring from another display or a computer.

Current Transformer Primary Current

The secondary current of CT is fixed 40mA, and the primary current is optional.

RS485 Serial – Modbus RTU




This uses an RS485 serial port with Modbus RTU protocol to provide a means of remotely monitoring and controlling the Unit

Set-up screens are provided for setting up the RS485 port.

Pulse output

This provides two pulse outputs that clock up measured active and reactive energy. The constant for active energy is 3200imp/kWh (Terminals 11&12). The pulse width for pulse 1 (Terminals 9&10) can be set from the set-up menu.

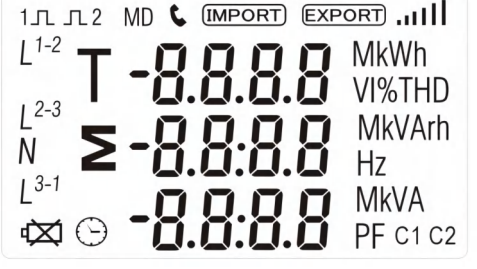



Start Up Screens

1	 <p>The first screen shows the following display segments and icons: 1, 2, MD, IMPORT, EXPORT, signal strength bars, L¹⁻², T, -8.8.8.8, MkWh, VI%THD, L²⁻³, Σ, -8.8.8.8, MkVArh, N, Hz, L³⁻¹, -8.8.8.8, MkVA, PF C1 C2, and a clock icon.</p>	The first screen lights up all display segments and can be used as a display check.
2	 <p>The second screen displays the following information: 50Fl, 1.302, 20 14.</p>	The second screen indicates the firmware installed in the unit and its build number.
3	 <p>The third screen displays the following information: 105t, 4E5t, PASS.</p>	The interface performs a self-test and indicates the result if the test passes.

*After a short delay, the screen will display active energy measurements.




Measurements

The buttons operate as follows:

1		Selects the Voltage and Current display screens In Set-up Mode, this is the “Left” or “Back” button.
2		Select the Frequency and Power factor display screens In Set-up Mode, this is the “Up” button
3		Select the Power display screens In Set-up Mode, this is the “Down” button
4		Select the Energy display screens In Set-up mode, this is the “Enter” or “Right” button

Voltage and Current

Each successive pressing of the  button selects a new range:

1-1		Phase to neutral voltages (3p4w)
1-2		Phase to Phase voltages (3p3w)
2		Current on each phase

2-1	<div><div>N</div><div>0.000</div><div>A</div></div>	Neutral current
3	<div><div>L¹</div><div>00.00</div><div>V %THD</div><div>L²</div><div>00.00</div><div>L³</div><div>00.00</div></div>	Phase to neutral voltage THD% (3p4w)
4	<div><div>L¹</div><div>00.00</div><div>I%THD</div><div>L²</div><div>00.00</div><div>L³</div><div>00.00</div></div>	Current THD% for each phase

Frequency and Power factor and Demand

Each successive pressing of the

M▲

 button selects a new range:

1	<div><div>Σ</div><div>00.00</div><div>Hz</div><div>0.999</div><div>PF</div></div>	Frequency and Power Factor (total)
2	<div><div>L¹</div><div>0.999</div><div>L²</div><div>0.999</div><div>L³</div><div>0.999</div><div>PF</div></div>	Power Factor of each phase


3	<div><div>MD</div><div><div>L¹</div><div>L²</div><div>L³</div><div><div>0.0000</div><div>0.0000</div><div>0.0000</div></div><div>A</div></div></div>	Maximum Current Demand
4	<div><div>MD</div><div><div>Σ</div><div>0.0000</div><div>kW</div></div></div>	Maximum Power Demand

Power


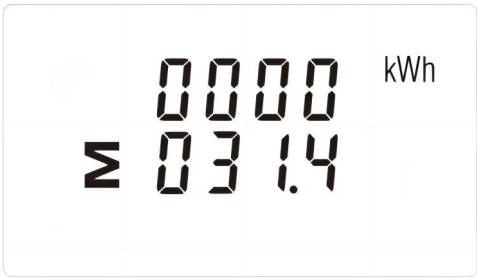




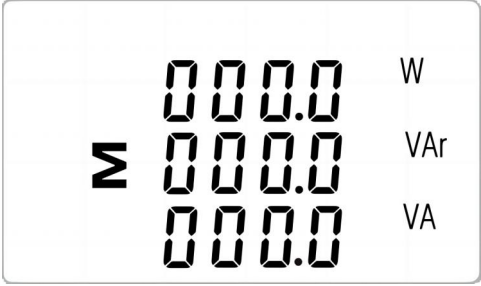


Each successive pressing of the button select a new range:

1	<div><div><div>L¹</div><div>L²</div><div>L³</div><div><div>0.0000</div><div>0.0000</div><div>0.0000</div></div><div>kW</div></div></div>	Instantaneous Active Power in kW
2	<div><div><div>L¹</div><div>L²</div><div>L³</div><div><div>0.0000</div><div>0.0000</div><div>0.0000</div></div><div>kVAr</div></div></div>	Instantaneous Reactive Power in kVAr
3	<div><div><div>L¹</div><div>L²</div><div>L³</div><div><div>0.0000</div><div>0.0000</div><div>0.0000</div></div><div>kVA</div></div></div>	Instantaneous Volt-amps in KVA

4		Total W, VAr, VA
---	---	------------------

Energy Measurements

Each successive pressing of the  button selects a new range:		
1		Total active energy in kWh
2		Total reactive energy in kVarh
3		Imported active energy in kWh
4		Exported active energy in kWh

5		Imported reactive energy in kVarh
6		Exported reactive energy in kVarh

Setting Up


To enter set-up mode, pressing the  button for 3 seconds, until the password screen appears.



Setting up is password-protected so you must enter the correct password (default '1000') before processing.

If an incorrect password is entered, the display will show: PASS Err













To exit setting-up mode, press  repeatedly until the measurement screen is restored.

Set-up Entry Methods





Some menu items, such as password and CT, require a four-digit number entry while others, such as supply system, require selection from a number of menu options.

Menu Option Selection

- 1) Use the  and  buttons to select the required item from the menu. Selection does not roll over between bottom and top of list
- 2) Press  to confirm your selection
- 3) If an item flashes, then it can be adjusted by the  and  buttons. If not, there maybe a further layer.
- 4) Having selected an option from the current layer, press  to confirm your selection.
- 5) Having completed a parameter setting, press  to return to a higher menu level. You will be able to use the  and  buttons for further menu selection.
- 6) On completion of all setting-up, press  repeatedly until the measurement screen is restored.

Number Entry Procedure

When setting up the unit, some screens require the entering of a number. In particular, on entry to the setting up section, a password must be entered. Digits are set individually, from left to right. The procedure is as follows:

- 1) The current digit to be set flashes and is set using the  and  buttons
- 2) Press  to confirm each digit setting.
- 3) After setting the last digit, press  to exit the number setting routine.











Communication

There is a RS485 port can be used for communication using Modbus RTU protocol. For Modbus RTU, parameters are selected from Front panel.




RS485 Address










(The range is from 001 to 247)






1		From the Set-up menu, use  and  buttons to select the Address ID
2-1		Press  button to enter the selection routine. The current setting will be flashing.
2-2		Use  and  buttons to choose Modbus Address (001 to 247)
On completion of the entry procedure, press  button to confirm the setting and press  button to return the main set-up menu.		






Baud Rate

1		From the Set-up menu, use  and  buttons to select the Baud Rate option.
---	---	--











2-1		Press  to enter the selection routine. The current setting will flash.
2-2		Use  and  buttons to choose Baud rate 2.4k, 4.8k, 9.6k, 19.2k, 38.4k Default is 9.6k
On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.		

Parity

1		From the Set-up menu, use  and  buttons to select the Parity option.
2-1		Press  to enter the selection routine. The current setting will flash.

2-2		Use  and  buttons to choose Parity (EVEN / ODD / NONE) Default is NONE.
<p>On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.</p>		

Stop bits

1		From the Set-up menu, use  and  buttons to select the Stop Bit option.
2-1		Press  to enter the selection routine. The current setting will flash.
2-2		Use  and  buttons to choose Stop Bit (2 or 1)
<p>On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.</p>		

Note: Default is 1, and only when the parity is NONE that the stop bit can be changed to 2.

CT



The CT1 option sets the primary current of CT that wires to the meter. CT2 is fixed with 40mA

1		From the Set-up menu, use and buttons to select the CT primary (CT1). Its' default 120A, and ranged from 000 5 to 9999.
2		Secondary CT (CT2) It's fixed 40mA, and can not be set.

PT

The PT option sets the secondary voltage (PT2 100 to 500V) of the Voltage transformer (PT) that wires to the meter.











1		From the Set-up menu, use and buttons to select the PT option. The screen will show the voltage PT secondary voltage value. The default value is 400V
2		Secondary PT setting Press to enter the PT secondary voltage selection routine. The range is from 100 to 500V.

3		<p>Set PT ratios value</p> <p>Press  to enter the PT ratio screen.</p> <p>The range is from 0001 to 2000.</p>
<p>For example, if set the ratio to be 100, it means the primary voltage equals secondary voltage x 100</p>		

Pulse output

This option allows you to configure the pulse output. The output can be set to provide a pulse for a defined amount of energy active or reactive.

Use this section to set up the pulse output 1—Units: Total kWh (default), Total kVArh

1		<p>From the Set-up menu, use  and  buttons to select the Pulse output option.</p>
2		<p>Press  to enter the selection routine. The unit symbol will flash.</p>
3		<p>Use  and  buttons to choose kWh or kVArh.</p>
<p>On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.</p>		

Pulse rate

Use this to set the energy represented by each pulse. Rate can be set to 1 pulse per 0.01kWh/0.1kWh/1kWh/10kWh/100kWh/1000kWh.



(It shows 1 impulse = 10kWh/kVAh)

1		From the Set-up menu, use and buttons to select the Pulse Rate option.
2		Press to enter the selection routine. The current setting will flash. 0.01/0.1/1/10/100/1000kWh/kVAh per pulse
Use and buttons to choose pulse rate. On Completion of the entry procedure, press to confirm the setting and press to return to the main set up menu.		

Pulse Duration

The energy monitored can be active or reactive and the pulse width can be 200, 100 or 60ms.



(It shows pulse width of 200ms)

1-1		From the Set-up menu, use and buttons to select the Pulse width option.
1-2		Press to enter the selection routine. The current setting will flash. Use and buttons to choose pulse width.
On completion of the entry procedure, press to confirm the setting and press to return to the main set up menu.		

DIT Demand Integration Time

This sets the period in minutes over which the current and power readings are integrated for maximum demand measurement. The options are: off (0), 5, 8, 10, 15, 20, 30, 60 minutes

1		From the set-up menu, use and buttons to select the DIT option. The screen will show the currently selected integration time.
2-1		Press to enter the selection routine. The current time interval will flash
2-2		Use and buttons to select the time required.

2-3		Press to confirm the selection. SET indicator will appear.
Press to exit the DIT selection routine and return to the menu.		

Backlit set-up









The meter provides a function to set the blue backlit lasting time.

1		<p>The backlit lasting time is settable Default lasting time is 60 minutes For example, if it's set as 5, the backlit will be off in 5 minutes from the last time operation on the meter. Notes: If it's set as 0, the backlit will always be on.</p>
2		<p>Press to enter the selection routine. The current time interval will flash The options can be: 0/5/10/30/60/120 minutes</p>
Use and buttons to select the time required. Then press to confirm the set-up,		






Supply System








Use this section to set the type of power supply being monitored.

1		<p>From the Set-up menu, use and buttons to select the System option. The screen will show the currently selected power supply.</p>
---	--	---

2		Press  to enter the selection routine. The current selection will flash
3-1		Use  and  buttons to select the required system option: 1P2(W),3P3(W),3P4(W)
3-2		Press  to confirm the selection. SET indicator will appear.
Press  to exit the system selection routine and return to the menu. SET will disappear and you will be returned to the main Set-up Menu		








Change password

1		Use the  and  to choose the change password option
2-1		Press the  to enter the change password routine. The new password screen will appear with the first digit flashing

2-2		Use  and  to set the first digit and press  to confirm your selection. The next digit will flash.
2-3		Repeat the procedure for the remaining three digits
2-4		After setting the last digit, SET will show.
Press  to exit the number setting routine and return to the Set-up menu. SET will be removed		

CLR

The meter provides a function to reset the maximum demand value of current and power.

1		From the Set-up menu, use  and  buttons to select the reset option.
2		Press  to enter the selection routine. The MD will flash.
Press  to confirm the setting and press  to return to the main set up menu.		

Reverse connected current inputs correction set-up

1		use and buttons to select page "SET sys cont"
2-1		Press to enter Phase A , the default is Frd (forward)
2-2		use and buttons to Phase B or C setting pages

How to operate if phase A is reversely connected

1		Go to phase A setting page
2		Press to enter the selection routine. The Frd will flash. Use button to change Frd to Rev.
Press to confirm the setting and press to return to the main set up menu.		

Specifications

Measured Parameters

The unit can monitor and display the following parameters of a single phase two wire (1p2w), three phase three wire (3p3w) or four phase four wire (3p4w) supply.

Voltage and Current

Phase to neutral voltages 100 to 289V a.c.(Not suitable for 3P3W)

Voltages between phases 173 to 480Va.c.(Suitable for 3P3W)

Percentage total voltage harmonic distortion (THD%) for each phase to N (not for 3p3w supplies)

Percentage voltage THD% between phases (three phase supplies only)

Current THD% for each phase

Power factor and Frequency and Max. Demand

Frequency in Hz

Instantaneous power:

Power 0 to 3600 MW

Reactive Power 0 to 3600 MVA

Volt-amps 0 to 3600 MVA

Maximum demanded power since last Demand reset Power factor

Maximum neutral demand current, since the last Demand reset (Suitable for 3P3W)

Energy Measurements

- Imported/Exported active energy 0 to 9999999.9 kWh
- Imported/Exported reactive energy 0 to 9999999.9 kVAh
- Total active energy 0 to 9999999.9 kWh
- Total reactive energy 0 to 9999999.9 kVAh

Measured Inputs

Voltage inputs through 4-way fixed connector with 2.5mm² stranded wire capacity. single phase two wire (1p2w), three phase three wire(3p3w) or four phase four wire (3p4w) unbalanced. Line frequency measured from L1 voltage or L3 voltage.

Three current inputs (six physical terminals) with 2.5mm² stranded wire capacity for connection of external CTs. Nominal rated input current 333mA a.c. Rms.

Maximum torque is 0.4Nm.

Accuracy

- Voltage 0.5% of range maximum
- Current 0.5% of nominal
- Frequency 0.2% of mid-frequency
- Power factor 1% of unity (0.01)
- Active power (W) ±1% of range maximum

- Reactive power (VAr) $\pm 1\%$ of range maximum
- Apparent power (VA) $\pm 1\%$ of range maximum
- Active energy (Wh) Class 1 IEC 62053-21
- Reactive energy (VARh) Class 2 IEC62053-23
- Total harmonic distortion 1% up to 31st harmonic
- Response time to step input 1s, typical, to >99% of final reading, at 50/60Hz.

*Auxiliary Supply

Two-way fixed connector with 2.5mm² stranded wire capacity.

100 to 277V a.c. , 50/60Hz $\pm 10\%$ or 140 to 392V d.c. $\pm 20\%$. Consumption < 10W.

Interfaces for External Monitoring

Three interfaces are provided:

- an RS485 communication channel that can be programmed for Modbus RTU protocol
- an output indicating real-time measured energy.(configurable)
- an pulse output 3200imp/kWh (not configurable)

The Modbus configuration (Baud rate etc.) and the pulse output assignments (kWh/kVARh) are configured through the Set-up screens.

Pulse Output

The unit provides two pulse outputs. Both pulse outputs are passive type.

Pulse output 1 is configurable. The pulse output can be set to generate pulses to represent total kWh or kVARh.

The pulse constant can be set to generate 1 pulse per:

0.01 = 10 Wh/VARh

0.1 = 100 Wh/VARh

1 = 1 kWh/kVARh

10 = 10 kWh/kVARh

100 = 100 kWh/kVARh

1000=1000 kWh/kVARh

Pulse width: 200/100(default)/60ms

Pulse output 2 is non-configurable. It is fixed up with total kWh. The constant is 3200imp/kWh.

RS485 Output for Modbus RTU

For Modbus RTU, the following RS485 communication parameters can be configured from the Set-up menu:

Baud rate : 2400, 4800, 9600(default), 19200, 38400

Parity : none (default)/odd/even

Stop bits : 1 or 2

RS485 network address : *nnn* – 3-digit number, 001 to 247

Modbus™ Word order : Hi/Lo byte order is set automatically to normal or reverse.

It cannot be configured from the set-up menu.

Reference Conditions of Influence Quantities

Influence Quantities are variables that affect measurement errors to a minor degree. Accuracy is verified under nominal value (within the specified tolerance) of these conditions.


- Ambient temperature 23°C ±1°C
- Input frequency 50 or 60Hz ±2%
- Input waveform Sinusoidal (distortion factor < 0.005)
- Auxiliary supply voltage Nominal ±1%
- Auxiliary supply frequency Nominal ±1%
- Auxiliary supply waveform (if AC) Sinusoidal (distortion factor < 0.05)
- Magnetic field of external origin Terrestrial flux

Environment



- Operating temperature -40°C to +70°C
- Storage temperature -40°C to +70°C
- Relative humidity 0 to 95%, non-condensing
- Altitude Up to 2000m
- Warm up time 5s
- Vibration 10Hz to 50Hz, IEC 60068-2-6, 2g
- Shock 30g in 3 planes

Dimensions and Installation

Serial Number	Serial number of terminal block	Terminals Capacity	Recommended To Install Torque
1	RS485/Pulse Terminals: 9、10、11、12、13、14	0.5~2.5mm²	0.2~0.4Nm
2	Sampling Terminals: 1、2、3、4、5、6、7、8、15、16、17、18、19、20	1.5~2.5mm²	0.2~0.4Nm

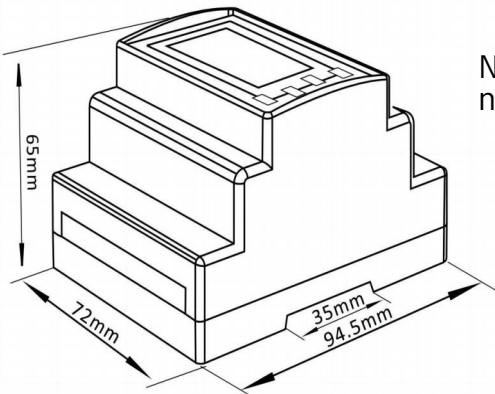


Note: See next page for diagrams of terminal serial numbers.

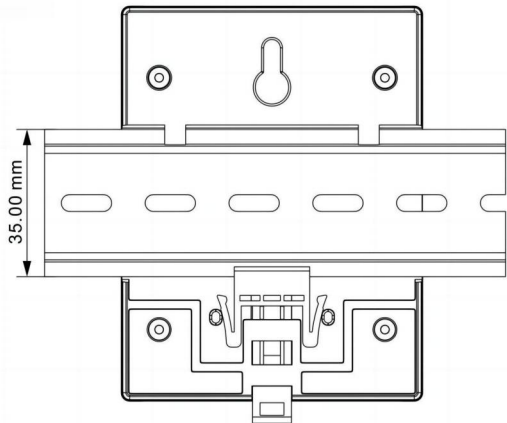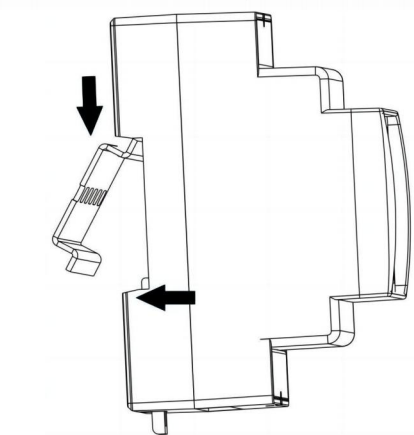


Wiring diagram

Three Phase Four Wire 3CT

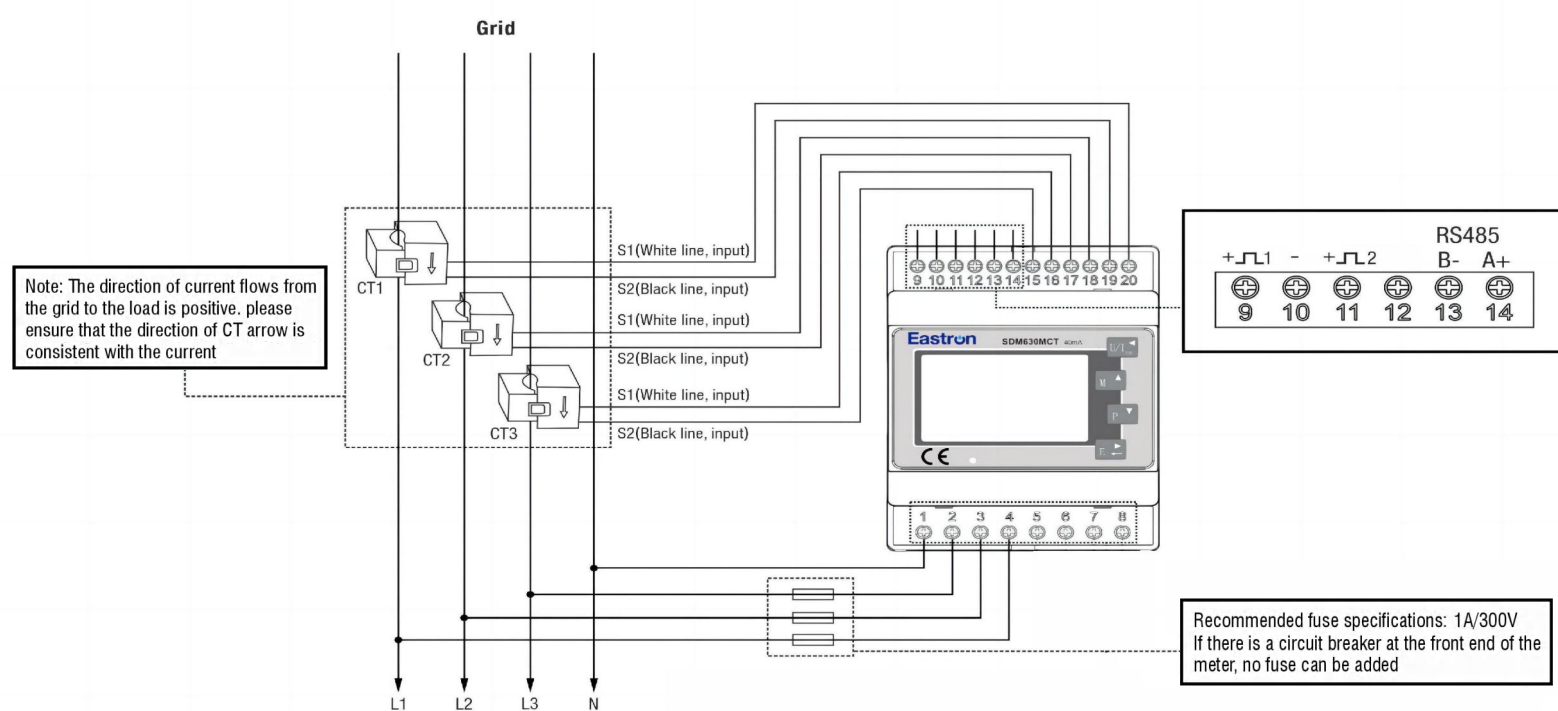


The internal power supply is complete and no external power supply is required.

Three Phase Three Wire 2CT

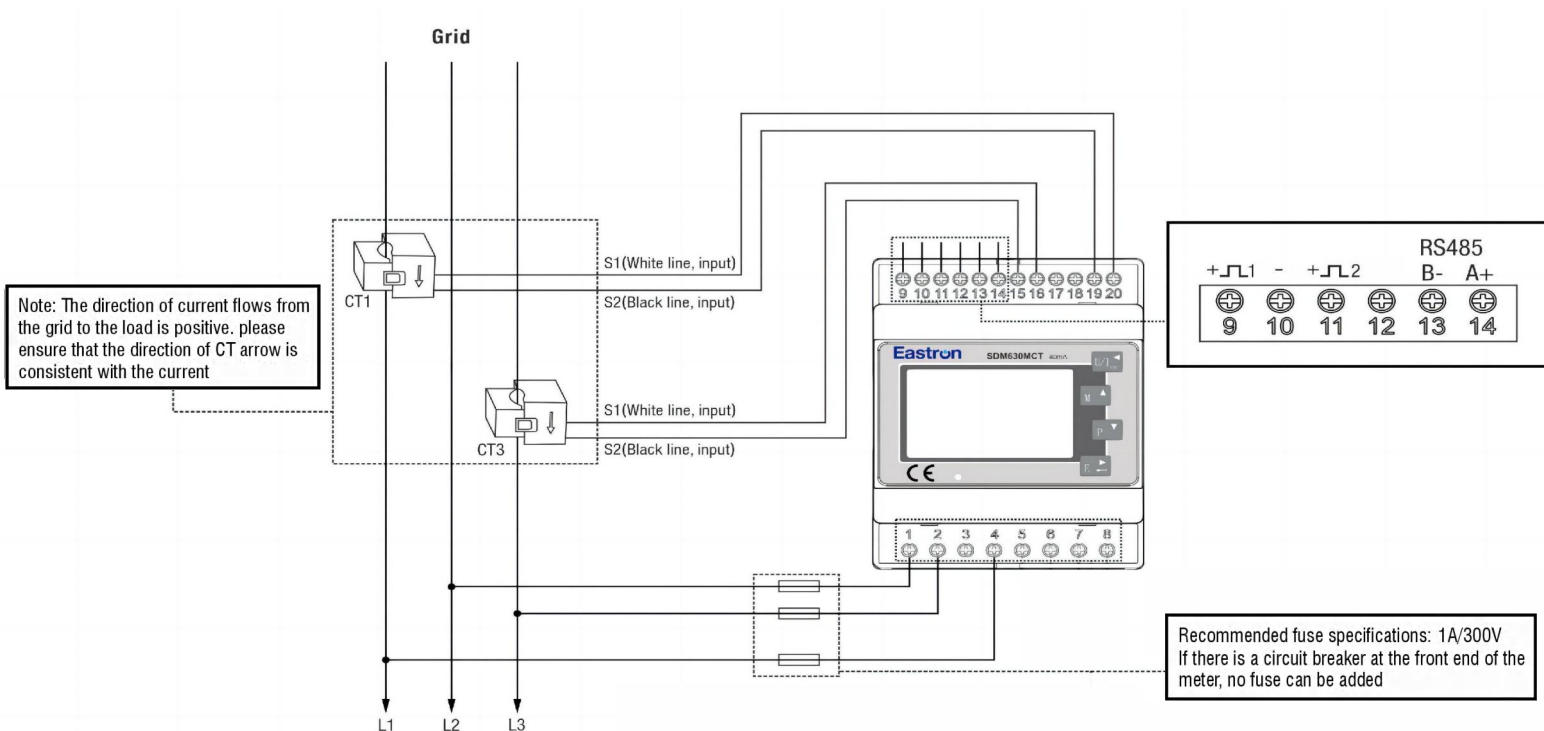

The internal power supply is complete and no external power supply is required.

Single Phase Two Wire 1CT

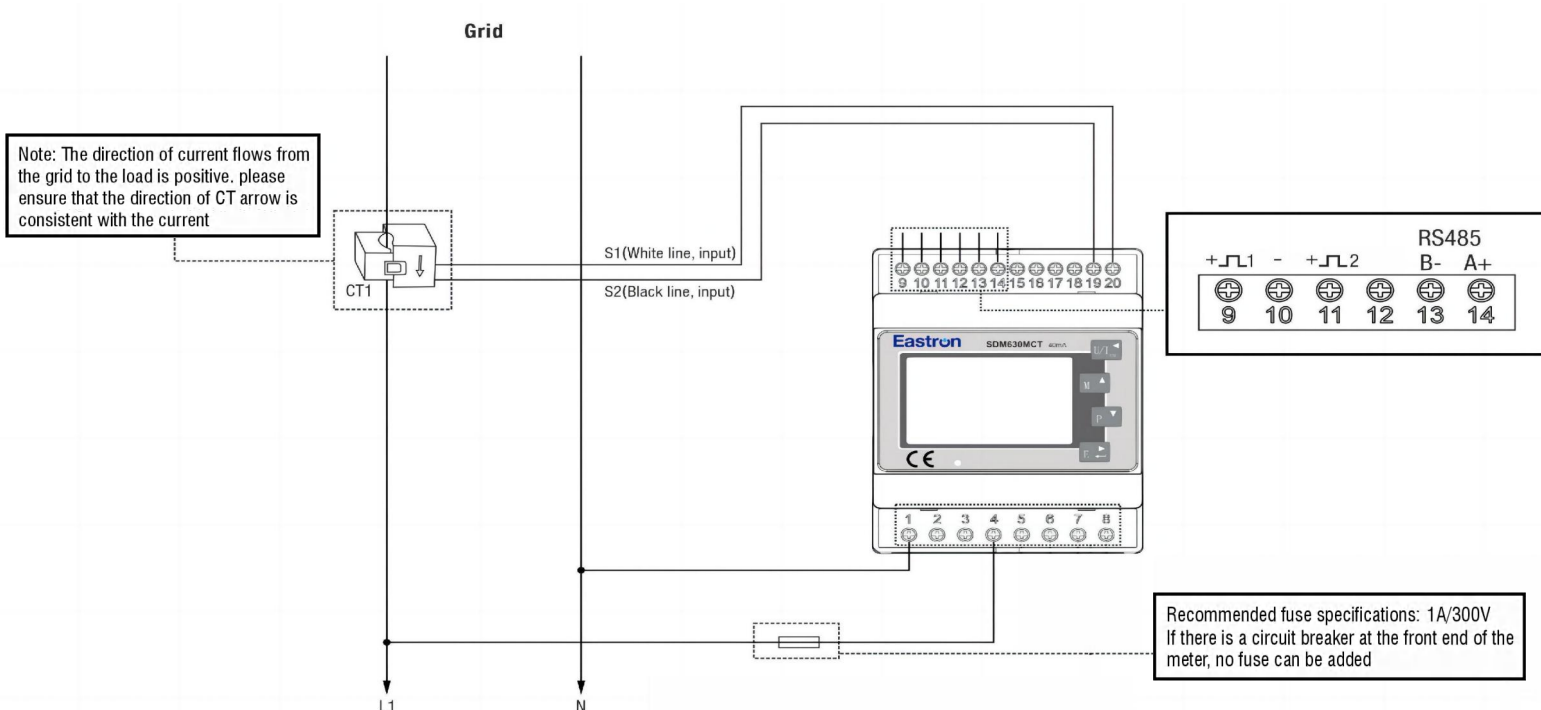

The internal power supply is complete and no external power supply is required.

If you have any question, please feel free to contact our sales team.

Zhejiang Eastron Electronic Co., Ltd.

NNo.52, Dongjin Road, Nanhu, Jiaxing, Zhejiang, 314001, China

Tel: +86-573-83698881 Fax: +86-573-83698883

Email: sales@eastrongroup.com

www.eastrongroup.com

Add: No.52, Dongjin Road, Nanhu, Jiaxing, Zhejiang, 314001, China.

www.eastrongroup.com

SDM630MCT 40mA

DIN Rail Energy Meter for Single and Three Phase Electrical Systems



- Measures kWh kVArh, kW, kVAr, kVA, P, F, PF, Hz, dmd, V, A, THD, etc.
- Bi-directional measurement IMP & EXP
- Two pulse outputs
- RS485 Modbus
- Din rail mounting 35mm
- 40mA CT connection
- Better than Class 1 / B accuracy

USER MANUAL V3.6

Introduction

The SDM630MCT 40mA measures and displays the characteristics of single phase two wire (1p2w), three phase three wire (3p3w) and three phase four wire (3p4w) supplies, including voltage, frequency, current, power, active and reactive energy, imported or exported. Energy is measured in terms of kWh, kVAh. Maximum demand current can be measured over preset periods of up to 60 minutes. In order to measure energy, the unit requires voltage and current inputs in addition to the supply required to power the product. The requisite current input are obtained current transformers(CT).

SDM630MCT 40mA can be configured to work with a wide range of CT with 40mA output, giving the unit a wide range of operation. Built-in interfaces provides pulse and RS485 Modbus RTU outputs. Configuration is password protected.

This unit can be powered from a separate auxiliary (AC or DC) supply. Alternatively it can be powered from the monitored supply, where appropriate.

Unit Characteristics

The Unit can measure and display:

- Line voltage and THD% (total harmonic distortion) of all phases
- Line Frequency
- Currents, Current demands and current THD% of all phases
- Power, maximum power demand and power factor
- Active energy imported and exported
- Reactive energy imported and exported

The unit has password-protected set-up screens for:

- Changing password
- Supply system selection 1p2w, 3p3w, 3p4w
- Demand Interval time
- Reset for demand measurements
- Pulse output duration

Two pulse output indicates real-time energy measurement. An RS485 output allows remote monitoring from another display or a computer.

Current Transformer Primary Current

The unit can be configured to operate with CT with 40mA output. The secondary CT is fixed 40mA, and the primary is optional.

RS485 Serial – Modbus RTU




This uses an RS485 serial port with Modbus RTU protocol to provide a means of remotely monitoring and controlling the Unit

Set-up screens are provided for setting up the RS485 port.

Pulse output

This provides two pulse outputs that clock up measured active and reactive energy. The constant for active energy is 3200imp/kWh (Terminals 11&12). The pulse width for pulse 1 (Terminals 9&10) can be set from the set-up menu.

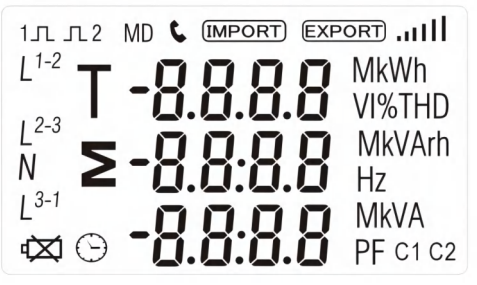



Start Up Screens

1	 <p>The first screen displays various status indicators at the top: 1, 2, MD, IMPORT, EXPORT, and a signal strength icon. Below these are three rows of measurements, each with a large '0' and four decimal places: 'T -0.0.0.0' (MkWh), 'Σ -0.0.0.0' (MkVArh), and '-0.0.0.0' (MkVA). To the right of these are labels: 'MkWh', 'VI%THD', 'MkVArh', 'Hz', 'MkVA', and 'PF C1 C2'. There are also some small icons on the left side of the screen.</p>	The first screen lights up all display segments and can be used as a display check.
2	 <p>The second screen displays the firmware version '50Fl' and the build number '1302' in a large, stylized font. Below these is the year '2014'.</p>	The second screen indicates the firmware installed in the unit and its build number.
3	 <p>The third screen displays the self-test results in a large, stylized font: '105t', 'tESt', and 'PASS'.</p>	The interface performs a self-test and indicates the result if the test passes.

*After a short delay, the screen will display active energy measurements.




Measurements

The buttons operate as follows:

1		Selects the Voltage and Current display screens In Set-up Mode, this is the “Left” or “Back” button.
2		Select the Frequency and Power factor display screens In Set-up Mode, this is the “Up” button
3		Select the Power display screens In Set-up Mode, this is the “Down” button
4		Select the Energy display screens In Set-up mode, this is the “Enter” or “Right” button

Voltage and Current

Each successive pressing of the  button selects a new range:

1-1		Phase to neutral voltages (3p4w)
1-2		Phase to Phase voltages (3p3w)
2		Current on each phase

2-1	<div>N0.000A</div>	Neutral current
3	<div>L¹00.00V %THD L²00.00 L³00.00</div>	Phase to neutral voltage THD% (3p4w)
4	<div>L¹00.00I %THD L²00.00 L³00.00</div>	Current THD% for each phase

Frequency and Power factor and Demand

Each successive pressing of the

M▲

 button selects a new range:

1	<div>Σ00.00Hz 0.999PF</div>	Frequency and Power Factor (total)
2	<div>L¹0.999 L²0.999 L³0.999PF</div>	Power Factor of each phase


3	<div><div>MD</div><div><div>L¹</div><div>L²</div><div>L³</div><div><div>0.0000</div><div>0.0000</div><div>0.0000</div></div><div>A</div></div></div>	Maximum Current Demand
4	<div><div>MD</div><div><div>Σ</div><div>0.0000</div><div>kW</div></div></div>	Maximum Power Demand

Power



Each successive pressing of the button select a new range:

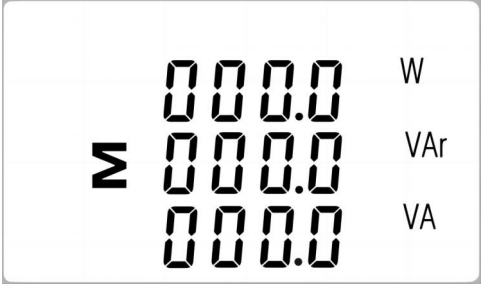



1	<div><div><div>L¹</div><div>L²</div><div>L³</div><div><div>0.0000</div><div>0.0000</div><div>0.0000</div></div><div>kW</div></div></div>	Instantaneous Active Power in kW
2	<div><div><div>L¹</div><div>L²</div><div>L³</div><div><div>0.0000</div><div>0.0000</div><div>0.0000</div></div><div>kVAr</div></div></div>	Instantaneous Reactive Power in kVAr
3	<div><div><div>L¹</div><div>L²</div><div>L³</div><div><div>0.0000</div><div>0.0000</div><div>0.0000</div></div><div>kVA</div></div></div>	Instantaneous Volt-amps in KVA

4		Total W, VAr, VA
---	---	------------------

Energy Measurements

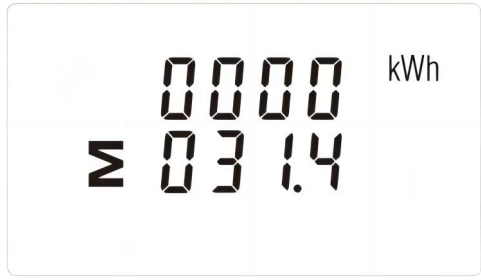

Each successive pressing of the  button selects a new range:

1		Total active energy in kWh
2		Total reactive energy in kVarh
3		Imported active energy in kWh
4		Exported active energy in kWh

5		Imported reactive energy in kVArh
6		Exported reactive energy in kVArh


Setting Up


To enter set-up mode, pressing the  button for 3 seconds, until the password screen appears.



Setting up is password-protected so you must enter the correct password (default '1000') before processing.

If an incorrect password is entered, the display will show: PASS Err

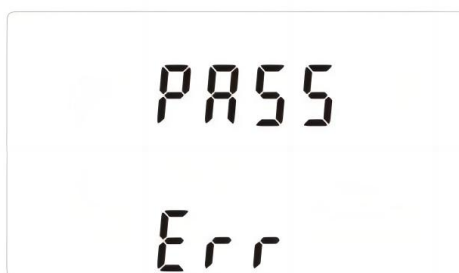











To exit setting-up mode, press  repeatedly until the measurement screen is restored.

Set-up Entry Methods





Some menu items, such as password and CT, require a four-digit number entry while others, such as supply system, require selection from a number of menu options.

Menu Option Selection

- 1) Use the  and  buttons to select the required item from the menu. Selection does not roll over between bottom and top of list
- 2) Press  to confirm your selection
- 3) If an item flashes, then it can be adjusted by the  and  buttons. If not, there maybe a further layer.
- 4) Having selected an option from the current layer, press  to confirm your selection.
- 5) Having completed a parameter setting, press  to return to a higher menu level. You will be able to use the  and  buttons for further menu selection.
- 6) On completion of all setting-up, press  repeatedly until the measurement screen is restored.

Number Entry Procedure

When setting up the unit, some screens require the entering of a number. In particular, on entry to the setting up section, a password must be entered. Digits are set individually, from left to right. The procedure is as follows:

- 1) The current digit to be set flashes and is set using the  and  buttons
- 2) Press  to confirm each digit setting.
- 3) After setting the last digit, press  to exit the number setting routine.

Communication

There is a RS485 port can be used for communication using Modbus RTU protocol. For Modbus RTU, parameters are selected from Front panel.

RS485 Address










(The range is from 001 to 247)






1		From the Set-up menu, use and buttons to select the Address ID
2-1		Press button to enter the selection routine. The current setting will be flashing.
2-2		Use and buttons to choose Modbus Address (001 to 247)
On completion of the entry procedure, press button to confirm the setting and press button to return the main set-up menu.		






Baud Rate

1		From the Set-up menu, use and buttons to select the Baud Rate option.
---	--	---











2-1		Press  to enter the selection routine. The current setting will flash.
2-2		Use  and  buttons to choose Baud rate 2.4k, 4.8k, 9.6k, 19.2k, 38.4k Default is 9.6k
On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.		

Parity

1		From the Set-up menu, use  and  buttons to select the Parity option.
2-1		Press  to enter the selection routine. The current setting will flash.

2-2		Use  and  buttons to choose Parity (EVEN / ODD/ NONE) Default is NONE.
<p>On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.</p>		





Stop bits

1		From the Set-up menu, use  and  buttons to select the Stop Bit option.
2-1		Press  to enter the selection routine. The current setting will flash.
2-2		Use  and  buttons to choose Stop Bit (2 or 1)
<p>On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.</p>		

Note: Default is 1, and only when the parity is NONE that the stop bit can be changed to 2.






CT



The CT option sets the primary current of the current transformer (CT) that wires to the meter.
CT2 is fixed with 40mA

1		From the Set-up menu, use  and  buttons to select the CT primary(CT1). Its' default 300A,and ranged from 000 5 to9999.
2		Secondary CT(CT2) It's fixed 40mA, and can not be set.

PT

The PT option sets the secondary voltage (PT2 100 to 500V) of the Voltage transformer (PT) that wires to the meter.











1		From the Set-up menu, use  and  buttons to select the PT option. The screen will show the voltage PT secondary voltage value. The default value is 400V
2		Secondary PT setting Press  to enter the PT secondary voltage selection routine. The range is from 100 to 500V.

3		<p>Set PT ratios value</p> <p>Press  to enter the PT ratio screen.</p> <p>The range is from 0001 to 2000.</p>
<p>For example, if set the ratio to be 100, it means the primary voltage equals secondary voltage x 100</p>		

Pulse output

This option allows you to configure the pulse output. The output can be set to provide a pulse for a defined amount of energy active or reactive.

Use this section to set up the pulse output 1—Units: Total kWh (default), Total kVarh

1		<p>From the Set-up menu, use  and  buttons to select the Pulse output option.</p>
2		<p>Press  to enter the selection routine. The unit symbol will flash.</p>
3		<p>Use  and  buttons to choose kWh or kVarh.</p>
<p>On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.</p>		

Pulse rate

Use this to set the energy represented by each pulse. Rate can be set to 1 pulse per 0.01kWh/0.1kWh/1kWh/10kWh/100kWh/1000kWh.



(It shows 1 impulse = 10kWh/kVAh)

1		<p>From the Set-up menu, use and buttons to select the Pulse Rate option.</p>
2		<p>Press to enter the selection routine. The current setting will flash. 0.01/0.1/1/10/100/1000kWh/kVAh per pulse</p>
<p>Use and buttons to choose pulse rate. On Completion of the entry procedure, press to confirm the setting and press to return to the main set up menu.</p>		

Pulse Duration

The energy monitored can be active or reactive and the pulse width can be 200, 100 or 60ms.



(It shows pulse width of 200ms)

1-1		From the Set-up menu, use and buttons to select the Pulse width option.
1-2		Press to enter the selection routine. The current setting will flash. Use and buttons to choose pulse width.
On completion of the entry procedure, press to confirm the setting and press to return to the main set up menu.		

DIT Demand Integration Time

This sets the period in minutes over which the current and power readings are integrated for maximum demand measurement. The options are: off (0), 5, 8, 10, 15, 20, 30, 60 minutes

1		From the set-up menu, use and buttons to select the DIT option. The screen will show the currently selected integration time.
2-1		Press to enter the selection routine. The current time interval will flash
2-2		Use and buttons to select the time required.

2-3		Press to confirm the selection. SET indicator will appear.
Press to exit the DIT selection routine and return to the menu.		

Backlit set-up









The meter provides a function to set the blue backlit lasting time.

1		<p>The backlit lasting time is settable Default lasting time is 60minutes For example, if it's set as 5, the backlit will be off in 5minutes from the last time operation on the meter. Notes: If it's set as 0, the backlit will always be on.</p>
2		<p>Press to enter the selection routine. The current time interval will flash The options can be: 0/5/10/30/60/120 minutes</p>
Use and buttons to select the time required. Then press to confirm the set-up,		






Supply System








Use this section to set the type of power supply being monitored.

1		<p>From the Set-up menu, use and buttons to select the System option. The screen will show the currently selected power supply.</p>
---	--	---

2		Press  to enter the selection routine. The current selection will flash
3-1		Use  and  buttons to select the required system option: 1P2(W),3P3(W),3P4(W)
3-2		Press  to confirm the selection. SET indicator will appear.
Press  to exit the system selection routine and return to the menu. SET will disappear and you will be returned to the main Set-up Menu		








Change password

1		Use the  and  to choose the change password option
2-1		Press the  to enter the change password routine. The new password screen will appear with the first digit flashing

2-2		Use  and  to set the first digit and press  to confirm your selection. The next digit will flash.
2-3		Repeat the procedure for the remaining three digits
2-4		After setting the last digit, SET will show.
Press  to exit the number setting routine and return to the Set-up menu. SET will be removed		

CLR

The meter provides a function to reset the maximum demand value of current and power.

1		From the Set-up menu, use  and  buttons to select the reset option.
2		Press  to enter the selection routine. The MD will flash.
Press  to confirm the setting and press  to return to the main set up menu.		

Reverse connected current inputs correction set-up

1		use and buttons to select page "SET sys cont"
2-1		Press to enter Phase A , the default is Frd (forward)
2-2		use and buttons to Phase B or C setting pages

How to operate if phase A is reversely connected

1		Go to phase A setting page
2		Press to enter the selection routine. The Frd will flash. Use button to change Frd to Rev.
Press to confirm the setting and press to return to the main set up menu.		

Specifications

Measured Parameters

The unit can monitor and display the following parameters of a single phase two wire (1p2w), three phase three wire (3p3w) or four phase four wire (3p4w) supply.

Voltage and Current

Phase to neutral voltages 100 to 289V a.c. (not for 3p3w supplies)

Voltages between phases 173 to 480Va.c. (3p supplies only)

Percentage total voltage harmonic distortion (THD%) for each phase to N (not for 3p3w supplies)

Percentage voltage THD% between phases (three phase supplies only)

Current THD% for each phase

Power factor and Frequency and Max. Demand

Frequency in Hz

Instantaneous power:

Power 0 to 3600 MW

Reactive Power 0 to 3600 MVA

Volt-amps 0 to 3600 MVA

Maximum demanded power since last Demand reset Power factor

Maximum neutral demand current, since the last Demand reset (for three phase supplies only)

Energy Measurements

- Imported/Exported active energy 0 to 9999999.9 kWh
- Imported/Exported reactive energy 0 to 9999999.9 kVAh
- Total active energy 0 to 9999999.9 kWh
- Total reactive energy 0 to 9999999.9 kVAh

Measured Inputs

Voltage inputs through 4-way fixed connector with 2.5mm² stranded wire capacity. single phase two wire (1p2w), three phase three wire(3p3w) or four phase four wire (3p4w) unbalanced. Line frequency measured from L1 voltage or L3 voltage.

Three current inputs (six physical terminals) with 2.5mm² stranded wire capacity for connection of external CTs. Nominal rated input current 333mA a.c. Rms.

Maximum torque is 0.4Nm.

Accuracy

- Voltage 0.5% of range maximum
- Current 0.5% of nominal
- Frequency 0.2% of mid-frequency
- Power factor 1% of unity (0.01)
- Active power (W) ±1% of range maximum

- Reactive power (VAr) $\pm 1\%$ of range maximum
- Apparent power (VA) $\pm 1\%$ of range maximum
- Active energy (Wh) Class 1 IEC 62053-21
- Reactive energy (VARh) Class 2 IEC62053-23
- Total harmonic distortion 1% up to 31st harmonic
- Response time to step input 1s, typical, to >99% of final reading, 50/60Hz.

*Auxiliary Supply

Two-way fixed connector with 2.5mm² stranded wire capacity.

100 to 277V a.c. , 50/60Hz $\pm 10\%$, 140 to 392V d.c. $\pm 20\%$, Consumption < 10W.

Interfaces for External Monitoring

Three interfaces are provided:

- an RS485 communication channel that can be programmed for Modbus RTU protocol
- an output indicating real-time measured energy.(configurable)
- an pulse output 3200imp/kWh (not configurable)

The Modbus configuration (Baud rate etc.) and the pulse output assignments (kWh/kVARh) are configured through the Set-up screens.

Pulse Output

The unit provides two pulse outputs. Both pulse outputs are passive type.

Pulse output 1 is configurable. The pulse output can be set to generate pulses to represent total kWh or kVARh.

The pulse constant can be set to generate 1 pulse per:

0.01 = 10 Wh/VARh

0.1 = 100 Wh/VARh

1 = 1 kWh/kVARh

10 = 10 kWh/kVARh

100 = 100 kWh/kVARh

1000=1000 kWh/kVARh

Pulse width: 200/100(default)/60ms

Pulse output 2 is non-configurable. It is fixed up with total kWh. The constant is 3200imp/kWh.

RS485 Output for Modbus RTU

For Modbus RTU, the following RS485 communication parameters can be configured from the Set-up menu:

Baud rate : 2400, 4800, 9600(default), 19200, 38400

Parity : none (default)/odd/even

Stop bits : 1 or 2

RS485 network address : *nnn* – 3-digit number, 001 to 247

Modbus™ Word order Hi/Lo byte order is set automatically to normal or reverse. It cannot be configured from the set-up menu.

Reference Conditions of Influence Quantities

Influence Quantities are variables that affect measurement errors to a minor degree. Accuracy is verified under nominal value (within the specified tolerance) of these conditions.


- Ambient temperature 23°C ±1°C
- Input frequency 50 or 60Hz ±2%
- Input waveform Sinusoidal (distortion factor < 0.005)
- Auxiliary supply voltage Nominal ±1%
- Auxiliary supply frequency Nominal ±1%
- Auxiliary supply waveform (if AC) Sinusoidal (distortion factor < 0.05)
- Magnetic field of external origin Terrestrial flux

Environment



- Operating temperature -40°C to +70°C
- Storage temperature -40°C to +70°C
- Relative humidity 0 to 95%, non-condensing
- Altitude Up to 2000m
- Warm up time 5s
- Vibration 10Hz to 50Hz, IEC 60068-2-6, 2g
- Shock 30g in 3 planes

Dimensions and Installation

Serial Number	Serial number of terminal block	Terminals Capacity	Recommended To Install Torque
1	RS485/Pulse Terminals: 9、10、11、12、13、14	0.5~2.5mm ²	0.2~0.4Nm
2	Sampling Terminals: 1、2、3、4、5、6、7、8、15、16、17、18、19、20	1.5~2.5mm ²	0.2~0.4Nm

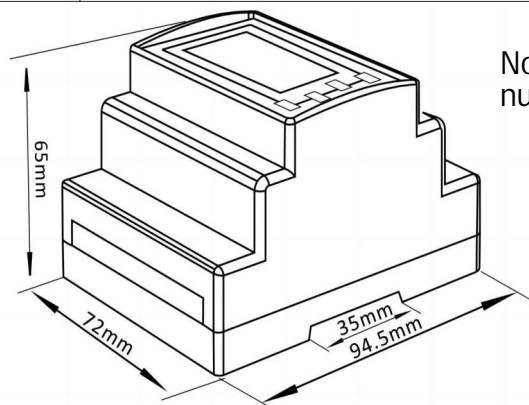


Note: See next page for diagrams of terminal serial numbers.

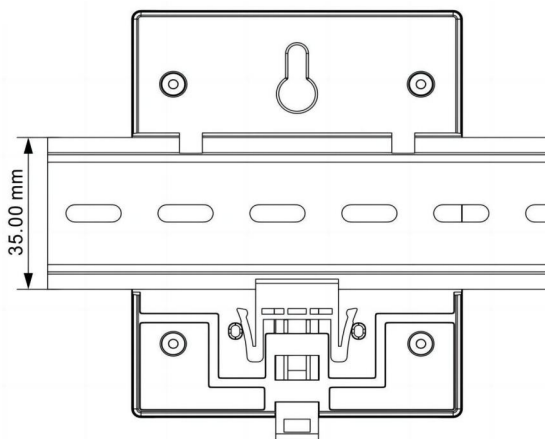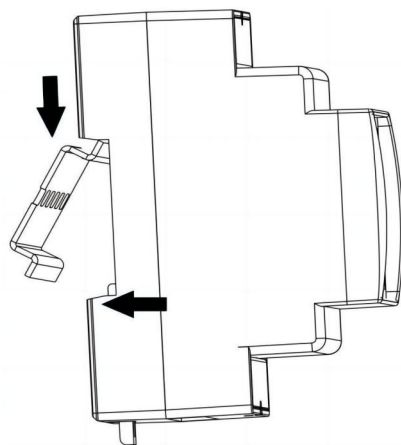


Wiring diagram

Three Phase Four Wire 3CT

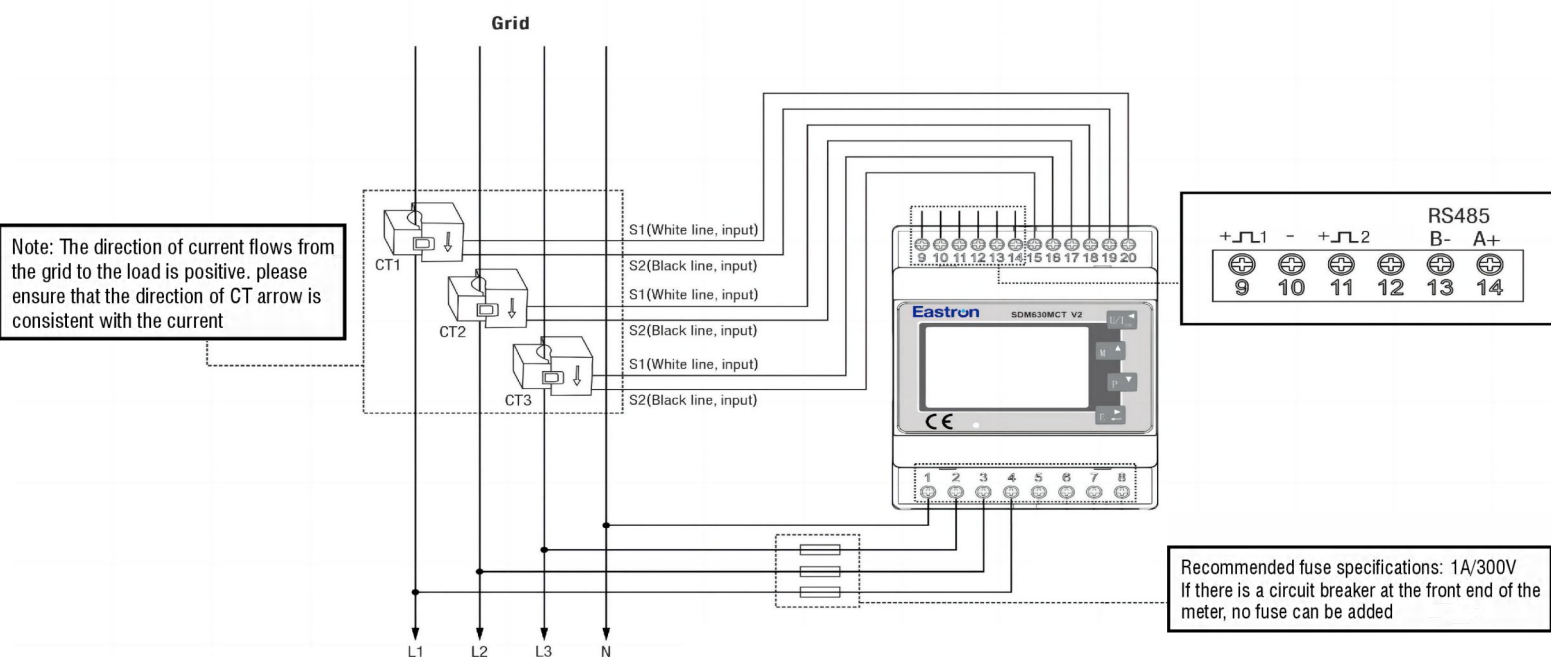


The internal power supply is complete and no external power supply is required.

Three Phase Three Wire 2CT

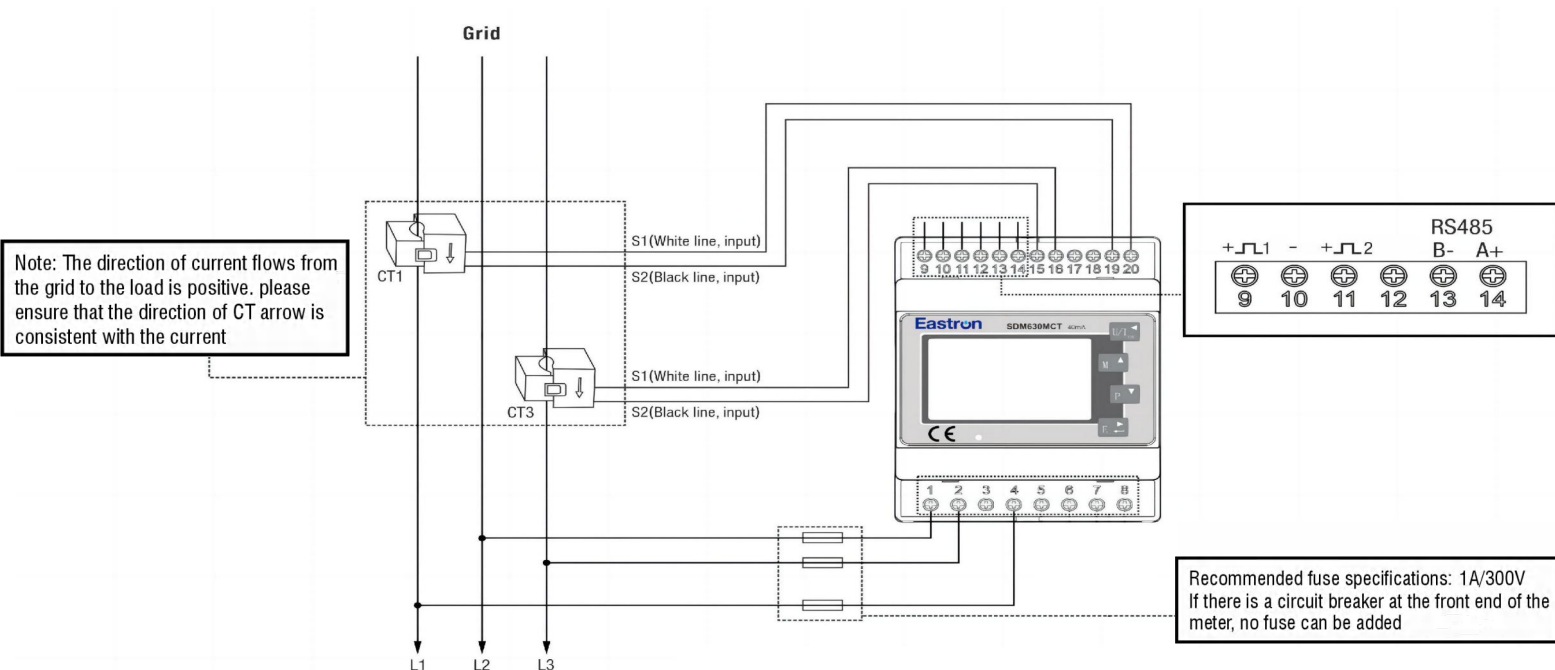

The internal power supply is complete and no external power supply is required.

Single Phase Two Wire 1CT

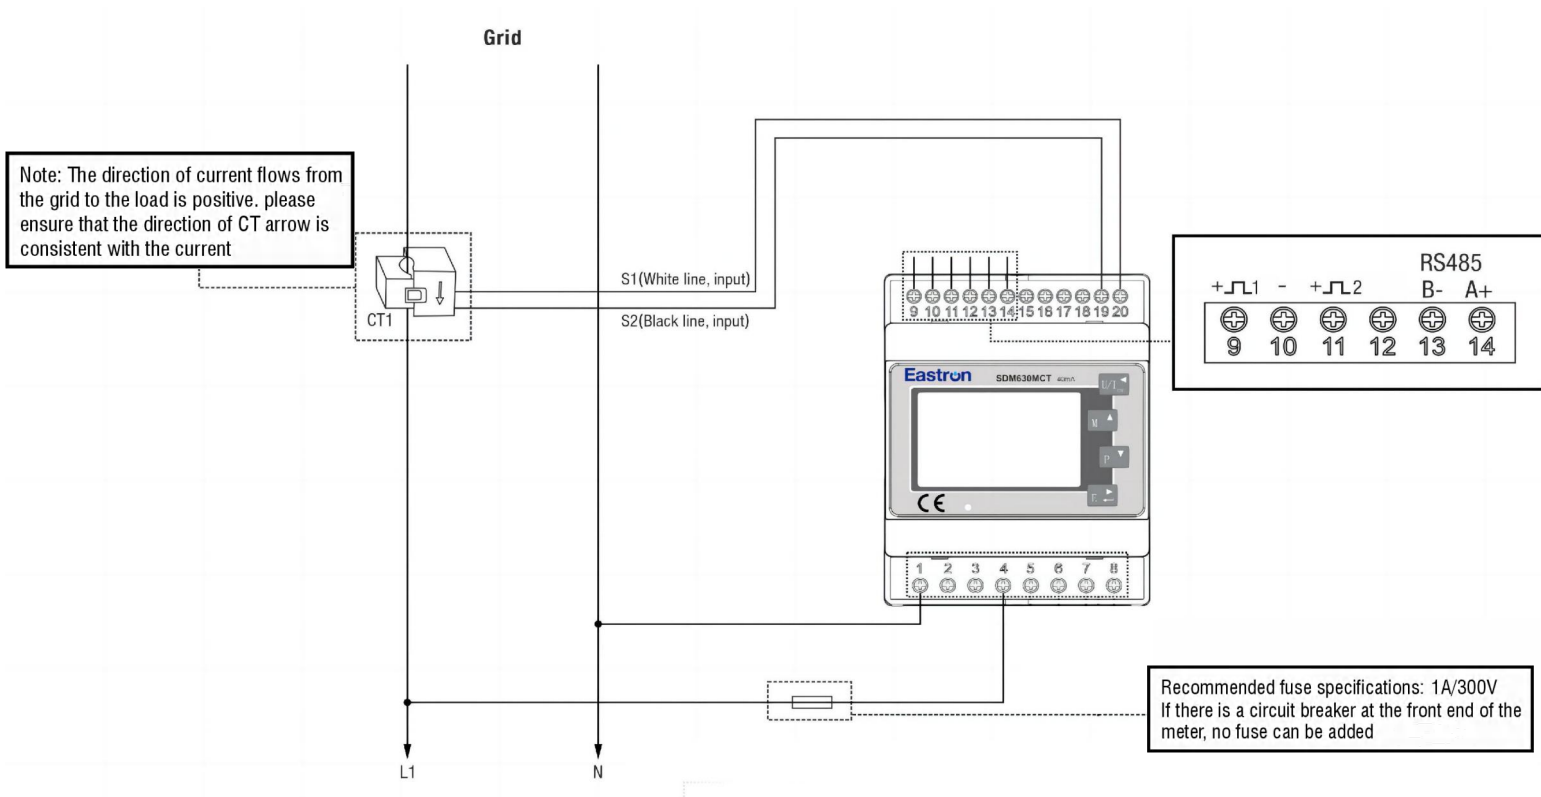

The internal power supply is complete and no external power supply is required.

If you have any question, please feel free to contact our sales team.

Zhejiang Eastron Electronic Co., Ltd.

NNo.52, Dongjin Road, Nanhu, Jiaxing, Zhejiang, 314001, China

Tel: +86-573-83698881 Fax: +86-573-83698883

Email: sales@eastrongroup.com

www.eastrongroup.com

Add: No.52, Dongjin Road, Nanhu, Jiaxing, Zhejiang, 314001, China.

www.eastrongroup.com