



INTEG M HYBRID INVERTER

Solinteg MHT-4~20K Hybrid Inverter



Quick Installation Guide


ENGLISH VERSION

Part 1
Installation


Part 2
Electrical Connection

1 Installation


A Check Packing List

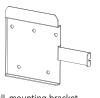 Inverter 1pcs	 Wall-mounting bracket 1pcs Expansion plug set 5pcs	 On-grid connector set (Red) 1pcs	 Back-up connector set (Black) 1pcs
 PV terminal MHT-4c-12K-25 2 pairs / MHT-10-20K-40 4 pairs	 Battery terminal 1 pairs	 Meter with 3 CTs 1pcs	 COM2 connector set 1pcs
 Monitoring device 1pcs	 10m meter communication cable 1pcs 3m battery communication cable 1pcs	 PE terminal 1pcs	 User Manual User guide 3pcs


B Installation Location




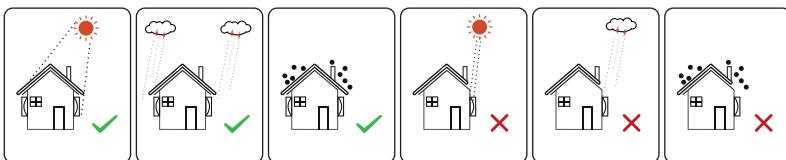


C Installation Space

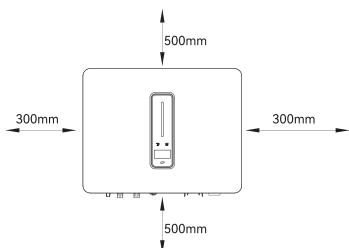

D Installation Angle

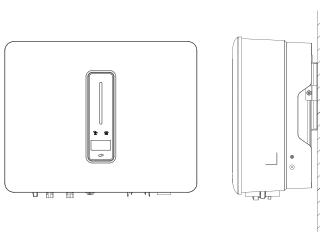

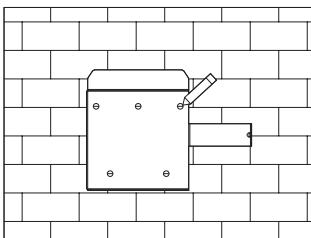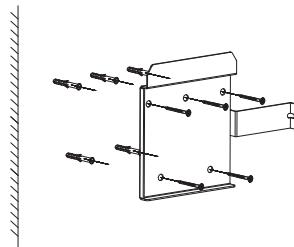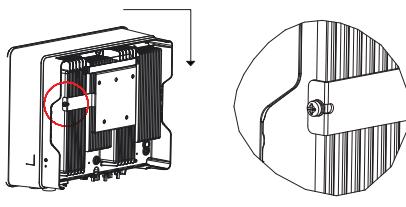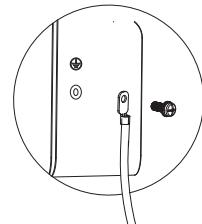E Mark the Position and Drill Holes**F** Fix Wall Bracket**G** Mounting Inverter**H** Grounding Terminal Connection

2 Electrical Connection


A Cable Requirements

Cable types	Cable requirements	
	Outside diameter	Conductor core section
AC cable	13.0-18.0 mm	2.5-10.0 mm ²
PV cable	5.9-8.8 mm	2.5-4.0 mm ²
Battery power cable	5.0-8.0 mm	10 mm ²


AC Connector: Please distinguish the on-grid and back-up connector, On-grid connector is red and Back-up connector is Black.

Battery power cable: If the conductor core of the battery cable is too small, which may cause poor contact between the terminal and the cable, please use the cable specified in the above table, or contact Solinteg to purchase terminals of other specifications.

B Electrical Wiring Diagram


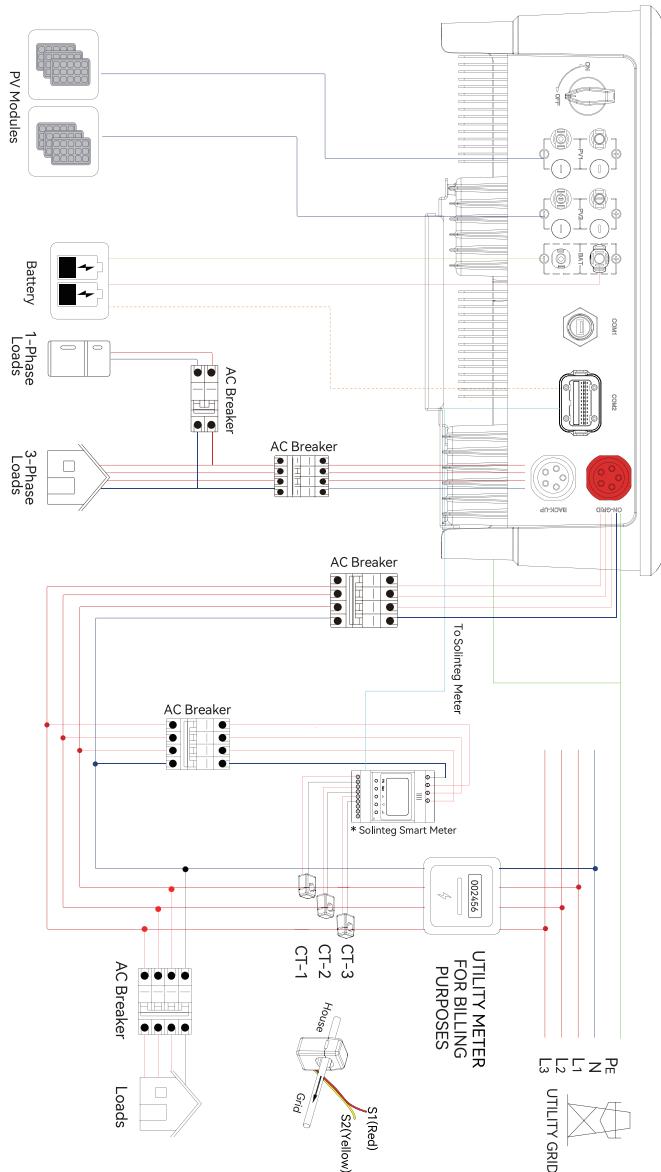


C AC Connection

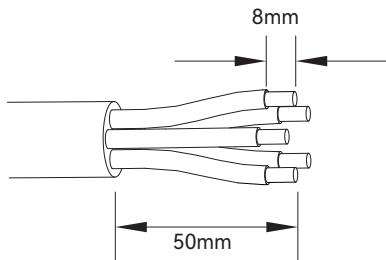


①


D Monitoring Device Installation

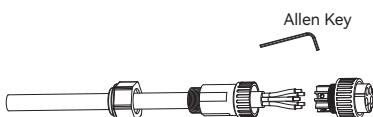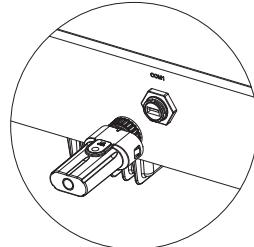

②



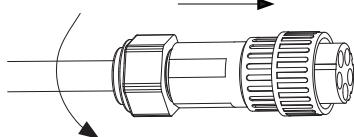


③

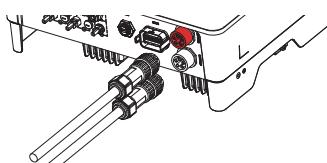

④

E Meter and CT Connection

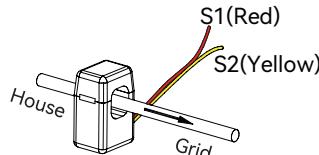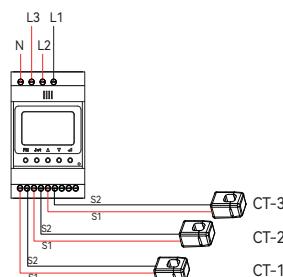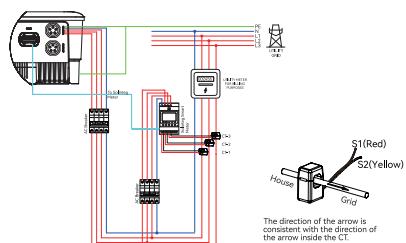


Meter Terminals Definition


No.	Definition	Function
	RMM	
1	L1	
2	L2	
3	L3	L1/L2/L3/N connect to grid to detect power grid voltage
4	N	
5	L1-S1	
6	L1-S2	
7	L2-S1	
8	L2-S2	To detect the CT current and direction
9	L3-S1	
10	L3-S2	
11	PE	Ground connection
RS485	Reserve	
	RS485-2	Communicate with hybrid inverter
ANT	Reserve	
LAN	Reserve	
Type-C	Type-C	Specified Debug Interface. Do not use it by non-professionals

F**Communication Connection**


①

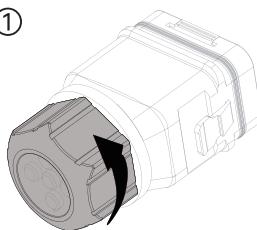


②

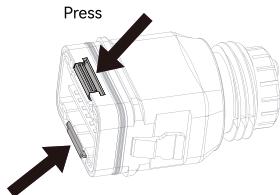

③

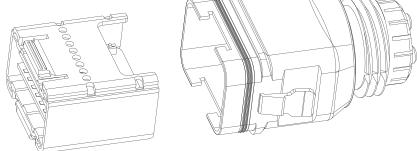

④

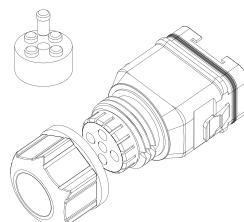


Part 1
Installation

Part 2
Electrical Connection




Pin	Definition	Function
METER (RJ45-1)	RS 485	Communicate with Meter
BMS (RJ45-1)	CAN	Communicate with BMS
1	COM	
2	NO (Normally Open)	Multifunction Relay
3-4	/	Reserved
5	DRM4/8	
6	DRM3/7	
7	DRM2/6	
8	DRM1/5	DRED For Australia and New Zealand RCR For Germany and some other European countries
15	COM D/0	
16	REF D/0	
9-10	/	Reserved
11	Fast stop +	
12	Fast stop -	Fast stop
13	485 B1	
14	485 A1	EMS
17	CANL_P	
18	CANH_P	CAN for parallel connection of inverters
19-20	/	Reserved


Connect the Meter and BMS Communication Cables

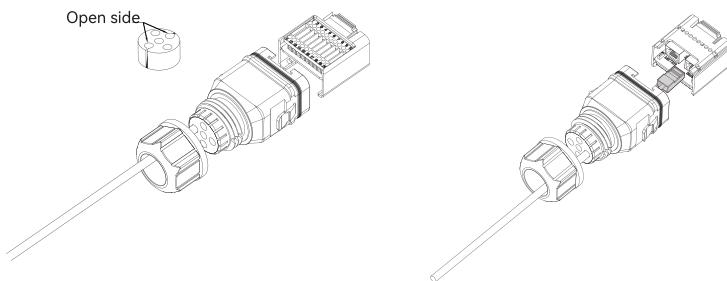


Connect Other Cables

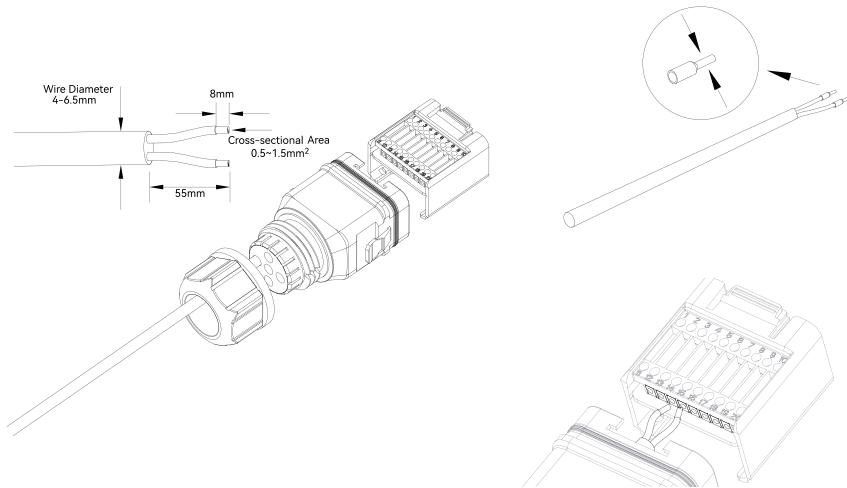

Installing the COM Connector

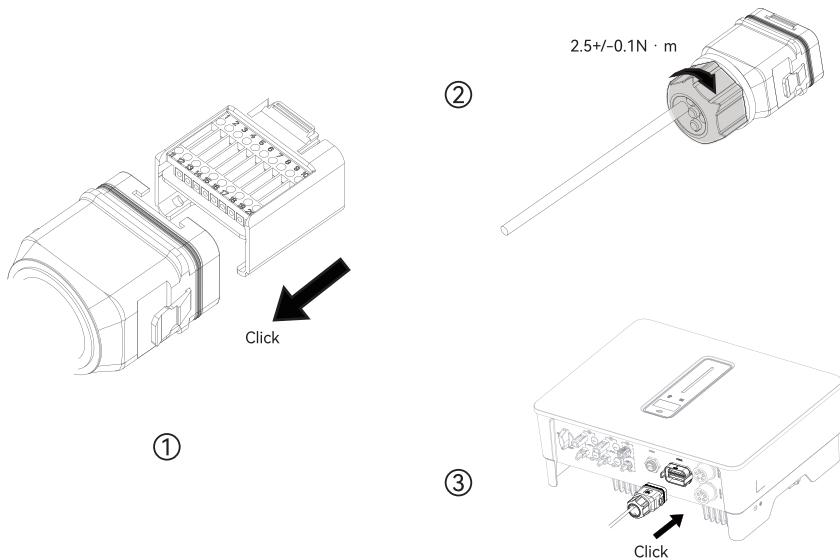


G PV String Connection

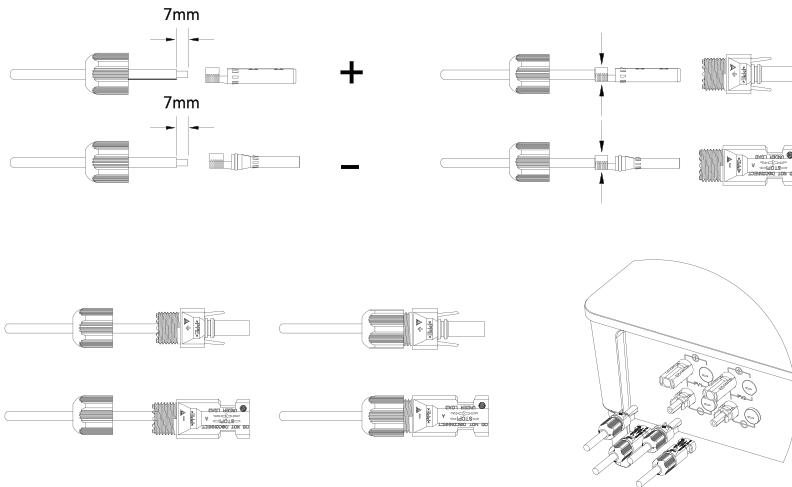

PV Max. Input voltage is 950V without battery, or 850V with battery, otherwise inverter will be waiting.

H Power Cable of the Battery Connection

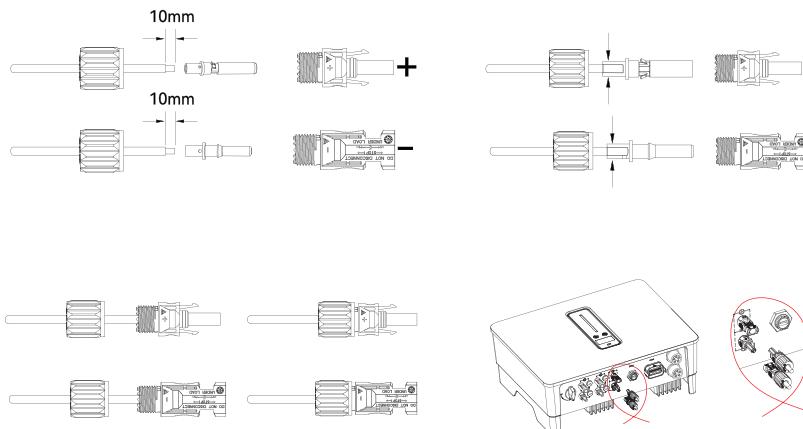

INTEGRATE SOLAR INTELLIGENT



www.solinteg.com

M11-000002-05